


6. Place a ridge union between each ridge tile. Secure the ends of the ridge by using screws and plates. Be careful not to over-tighten to avoid cracking a ridge tile.

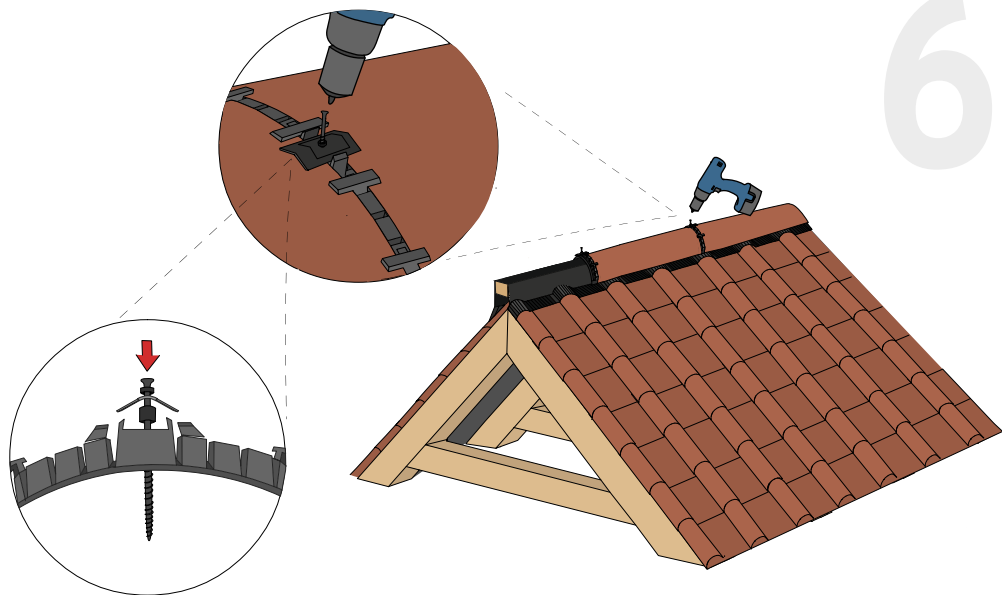

Recommendations:

To secure or to fix use galvanised or stainless steel nails / staples.

Recommended temperature of fixing – above 5 °C.

Recommended temperature of storing – not exceeding 35 °C.

When using adhesive strips, the surface of the tile/slate should be clean, dry and free of dust and grease.

The screws should be finished off with a screwdriver to make sure clamping plates are tightly secured.



Wabis Roofing Accessories Ltd.

Mansfield i-Centre
Oakham Business Park
Hamilton Way, Mansfield
Nottinghamshire, NG18 5BR

tel. + 44 (0) 7494 540742

office@wabis.co.uk
www.wabis.co.uk




UNIVERSAL DRY RIDGE SYSTEM

The **Fix Pack** complies with BS: 5534 for mechanical fixing, BS: 5250 and NHBC technical guidance for ventilation requirements. It is suitable for new and refurbished roofs (15 to 45 degrees) and eliminates the need for mortar.



Pack contents:

- 6 meters x 320 mm ventilated ridge roll providing 5000 mm² airflow per linear meter
- 10 x batten support brackets
- 13 x metal clamping plates
- 13 x 100 mm fixing screws and weatherstripping washers
- 13 x ridge unions

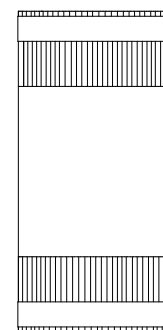


1 x 6 m



10 pcs.




13 pcs.

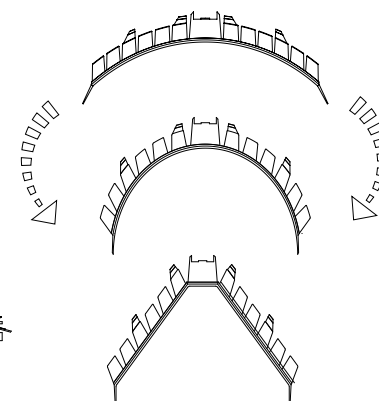


13 pcs.

FIXING INSTRUCTIONS


1. Lay the underlay and battens in the normal manner. If ventilation is required set back 5 - 30 mm from the ridge apex on both sides to provide an air ventilation gap. Do not fix the top tiling / slating batten at this stage.

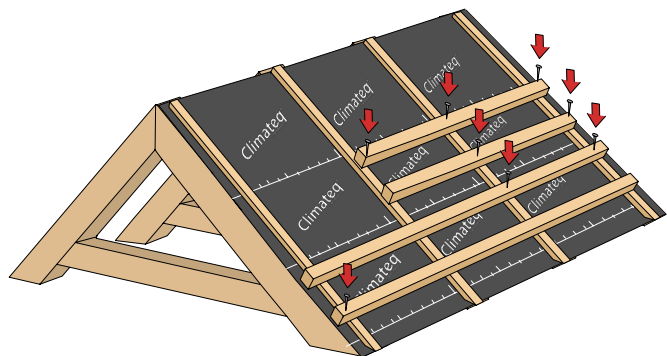


2. Using nails fix the ridge batten bracket to the rafters or trusses through holes on each side. Fit the ridge batten and secure to the ridge batten bracket.

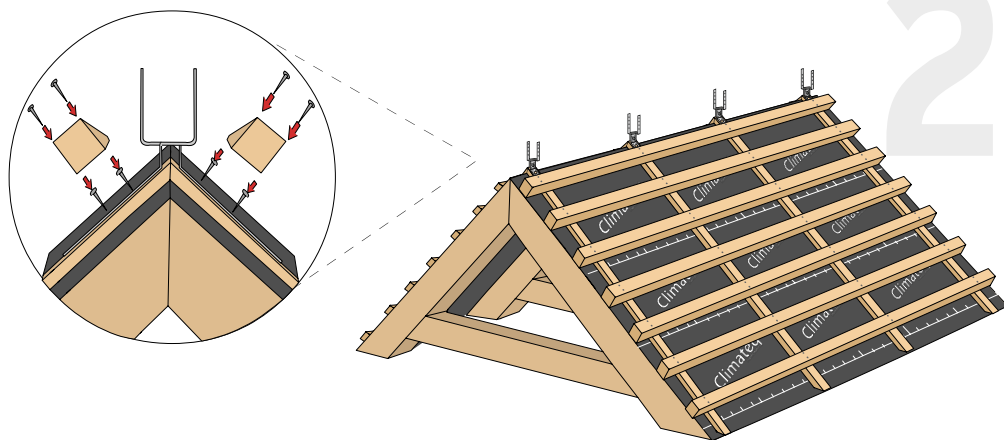

3. Fix top tiling / slating batten in the normal manner and leave a 10 mm air gap if required. Lay and fix the roof tiles or slates in accordance with the manufacturer's fixing specifications.

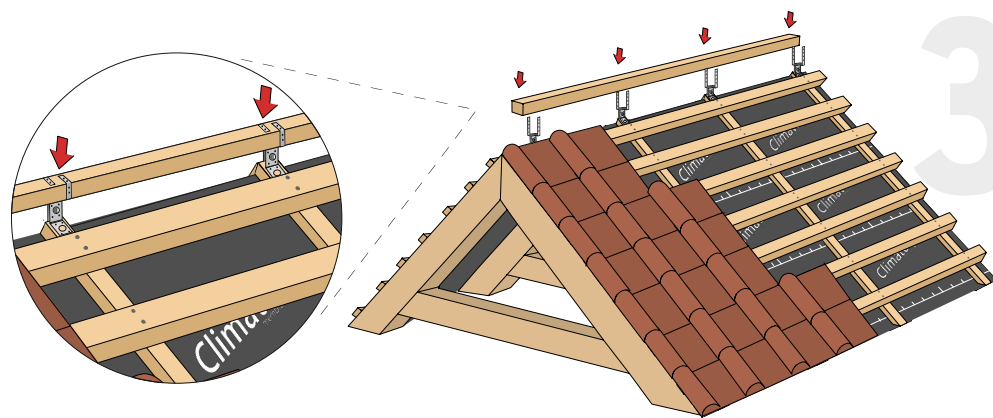

4. Roll out ventilated ridge roll along the ridge batten, secure using nails or staples at 1 metre intervals.

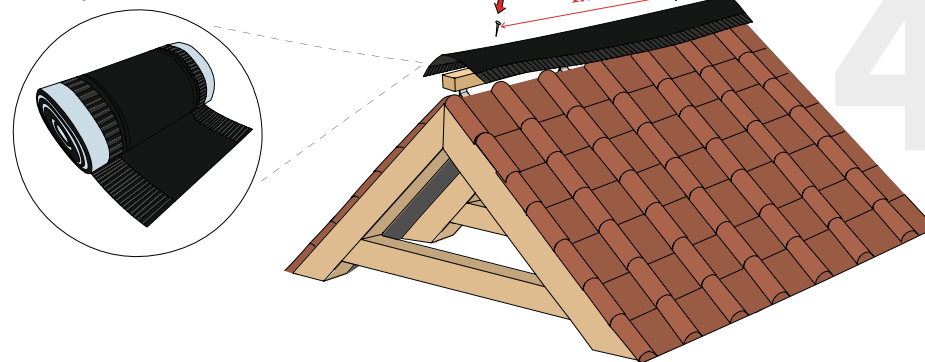

5. Make sure the surface of the tile or slate is clean, free of dust and dry where the corrugated edge of the vent roll will be laid down. Peel off the protective tape from the adhesive strip on the underside of the roll and press down into the tile or slate surface.

